

# OEM Manual (EN)

Version UMT/WG T-MT OEM rev. 1.1 date 15/04/2019



---

(pagina libera / empty page)

---

---

# Manual Guide

POINT 1-2 > **INTRODUCTION & SAFETY**

POINT 3-6 > **UNIT DESCRIPTION**

POINT 7 > **COMMISSIONING**

POINT 8 > **SOFTWARE – USER INTERFACE**

POINT 9 > **SERIAL COMMUNICATIONS**

POINT 10 > **MAINTENANCE**

POINT 11-13> **ALARMS AND TROUBLES**

POINT 14-21> **TECHNICAL DATA**

## Contents

1	Introduction .....	5
2	Safety issues with CO <sub>2</sub> - Safe handling .....	5
2.1	Precaution.....	5
3	Unit description & Main components.....	7
4	Unit installation .....	8
5	Piping details .....	9
5.1	Pipe Connections (Multi-Split) .....	9
5.2	Oil traps.....	9
6	Test and inspection before start-up .....	10
6.1	Control of the unit tightness.....	10
6.2	Preliminary controls according to EN 60204-1, visual controls.....	10
6.3	Management of the system. Configuration of the controllers.....	10
6.4	Inspection of the water loop.....	11
6.5	Earth connection.....	11
7	Commissioning.....	12
7.1	Evacuation and pre-charge.....	12
7.1.1	“VACUUM”, SW function details.....	12
7.2	Refrigerant & Oil Charging.....	13
7.2.1	Oil charge.....	13
7.2.2	Procedure for additional oil refill.....	13
7.2.3	Estimation of the refrigerant charge.....	14
7.2.4	Charging procedure.....	15
8	User Interface and main Software features.....	16
8.1	User Interface.....	16
8.2	On/Off unit.....	17
8.3	Regulation set point.....	18
8.4	MPXPRO and ULTRACELLA/EVO CAREL configuration. ....	19
8.5	MPXPRO and ULTRACELLA/EVO CAREL regulation.....	20
9	Serial Communication (PSD drivers, Evaporators and Supervisory System) .....	21
9.1	Communication with evaporators (features and requirements).....	21
9.2	Serial connections and wirings.....	22
10	Recommended Annual Checks.....	23
11	List of alarms .....	24
11.1	Hecu alarm.....	24
11.2	PSD (Power+) alarm code.....	29
11.3	PSD led status.....	31
12	Troubleshooting .....	32
13	Compressor Envelope .....	33
14	Refrigerant drawing (P&I).....	34
15	HECU Controller layout .....	35
16	Terminals blocks connection .....	36
17	Dimensional drawing.....	36
18	General information and limits .....	37
19	Electrical details.....	37
20	Cooling capacity Table .....	38
21	Conversion pressure-temperature CO <sub>2</sub> (R744).....	40
22	Note .....	41

## 1 Introduction

CUBO<sub>2</sub> AQUA is an high efficiency condensing unit (for CO<sub>2</sub> transcritical application) equipped with BLDC variable speed compressor. It is compact, easy to install and can directly communicate with the refrigerated units.

Thanks to these features it is a very efficient (even at partial load) without any compromise with the food conservation.

This manual refers to CUBO<sub>2</sub> AQUA models designed for cooling and conservation at medium temperatures. They are identified as:

UMT/WG T 030 MT DX	UMT/WG T 045 MT DX	UMT/WG T 067 MT DX	UMT/WG T 100 MT DX
--------------------	--------------------	--------------------	--------------------

## 2 Safety issues with CO<sub>2</sub> - Safe handling

When the R744 (CO<sub>2</sub>) is being handled, a qualified person must be present with the suitable equipment. CO<sub>2</sub> has no smell or colour and the operator would not be aware if there were any leaks.

The effects of increased CO<sub>2</sub> levels on adults at good health can be summarized:

CO <sub>2</sub> concentration		Effects
%	ppm	
0,04 %	< 400	Normal outdoor level
0,06 %	< 600	Acceptable levels
0,50 %	5000	8hours - Long Term Exposure Limit
1,5 %	15.000	15 minute - Short Term Exposure Limit.
3 %	30.000	Intoxicating, breathing and pulse rate increase, nausea.
10 %	100.000	Inconscious, further exposure death.
30 %	300.000	Quick death.

### 2.1 Precaution

- Dedicated pressure relief valves are necessary in all those sections of the system which can be isolated by shut valves. Due to the high thermal coefficient of expansion of liquid CO<sub>2</sub>, fluid pipes must not be blocked.
- All SCM units are protected against overpressure with pressure relief valves when required according to EN378 and PED.
- Given the high pressure that system can reach during operation, special attention must be paid to connect and regulate the unit.
- Before carrying out any repairs which involve breaking into the system/soldering or welding, all relevant parts must be emptied of CO<sub>2</sub>.
- Do not use other than the designated refrigerant (for charging, adding or recharging)
- Refrigerant gas leak may cause suffocation.
- Piping, equipment components and tools should be appropriate for use with R744 (CO<sub>2</sub> refrigerant).

- ☑ Use of unsuitable components or those designed for HFC refrigerant may cause serious incidents such as equipment failure and rupture of the refrigerant cycle.
- ☑ Securely place the cover on the electrical box and enclosure panel. Incomplete attachment may lead to penetration of water and living creatures, meaning potential current leak and fire/electrical shock.
- ☑ Do not change the set values of the safety device.
- ☑ Using the refrigeration unit with changed values may cause failure of the safety stop function and lead to a burst or fire.
- ☑ When abnormal operation is detected, or before starting disassembly or repair, turn off the main power switch.
- ☑ Specified components must be used for repair.
- ☑ Use of non-specified components may cause failure of the safety stop function and lead to burst or fire.
- ☑ Incorrect moving may cause falling or dropping of the refrigeration unit, and cause injury.
- ☑ Request a specialty operator for disposing the refrigeration unit.
- ☑ Make sure that access and emergency exit ways are not obstructed to comply with the local regulations.

### 3 Unit description & Main components

Medium temperature condensing unit is equipped with a BLDC compressors a Flash valve and an HPV valve.

The compressor is taking in charge the evaporation pressure control for the medium temperature refrigerated devices.

The Flash valve is controlling the pressure inside the receiver. The HPV valve is controlling the Gas Cooler pressure.


The system operates at the following pressures:

MT Compressor discharge pressure (PGC): operating between 45-105 bar

MT Compressor suction pressure: operating between 25 - 30 bar


Receiver pressure: operating between 40 – 50 bar

Compressor modulation range: 25 – 100 rps

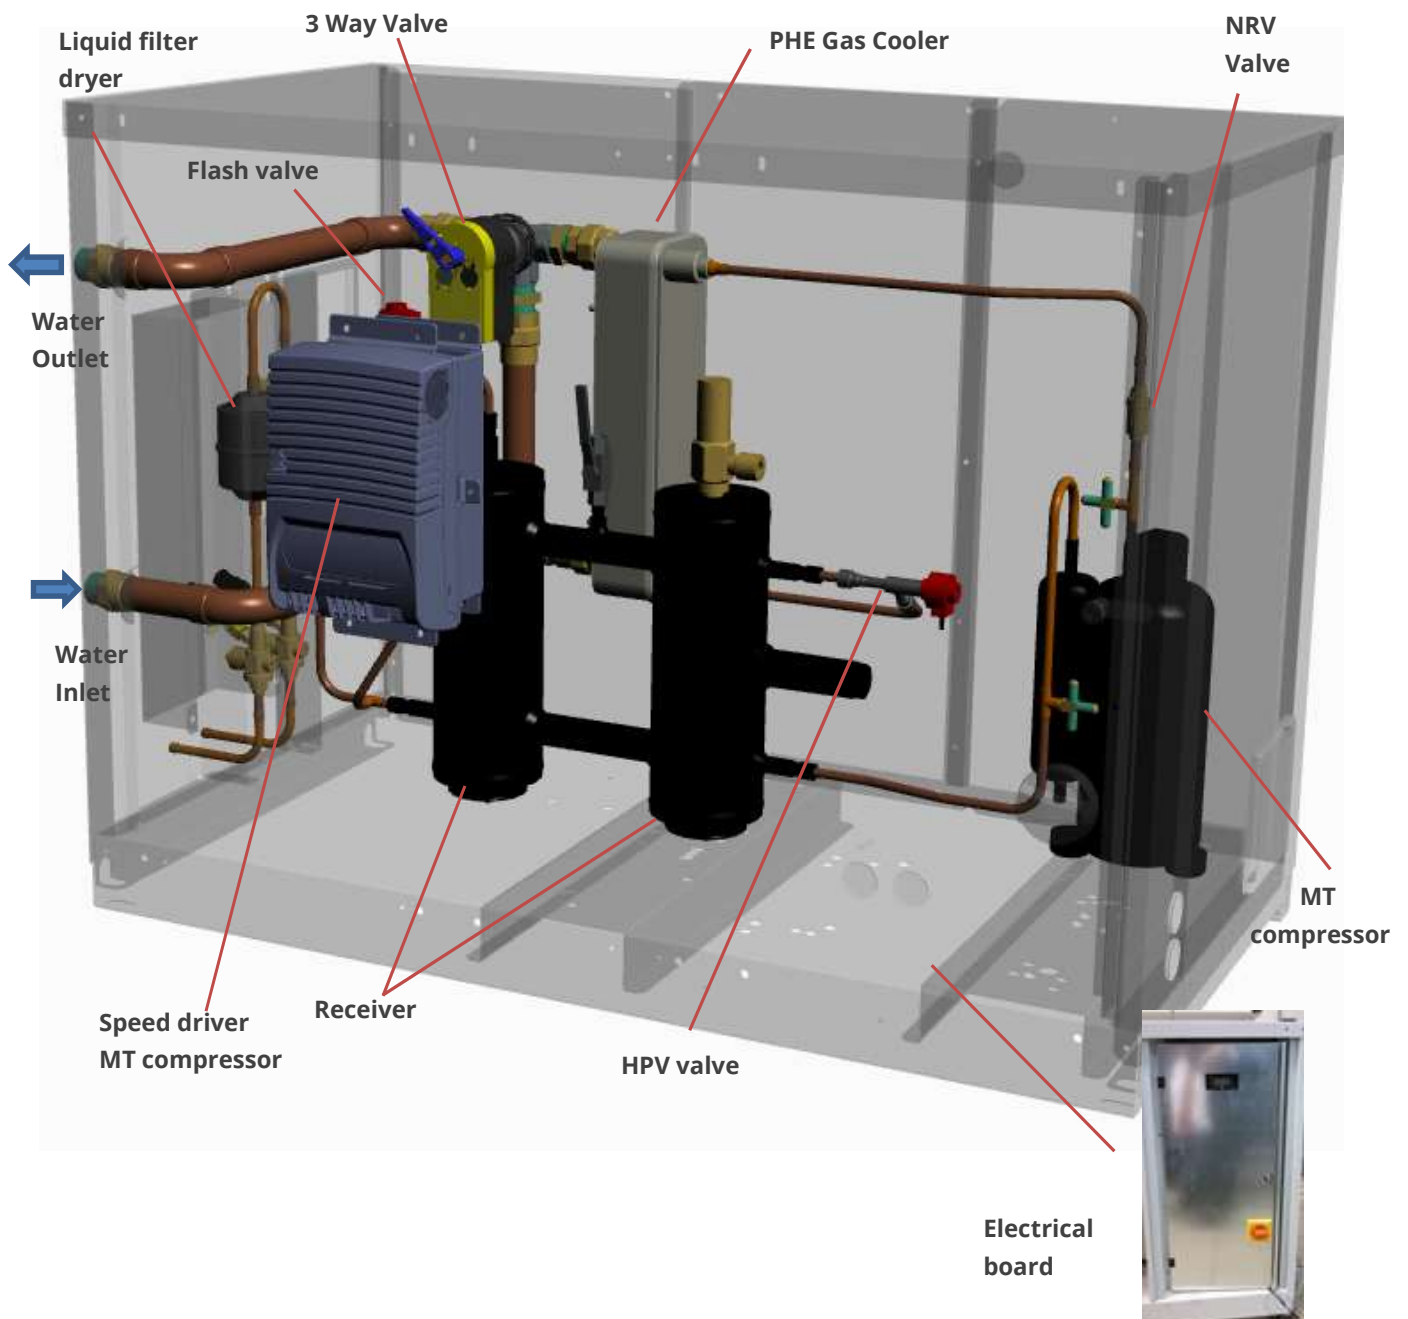


## 4 Unit installation


- ☑ The unit has been designed for outdoor installation.
- ☑ Respect distances for correct operation/ maintenance.
- ☑ In the case of several units in series or in parallel mode, respect the minimum distances for properly maintenance.

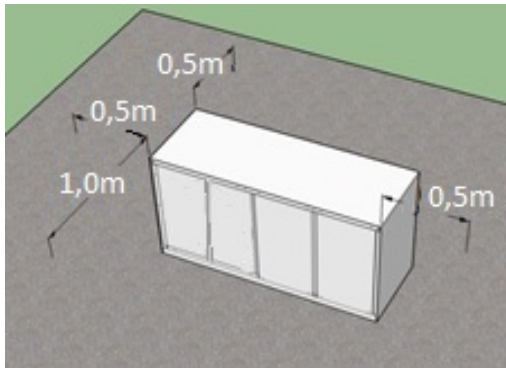

*Minimum maintenance distances.*

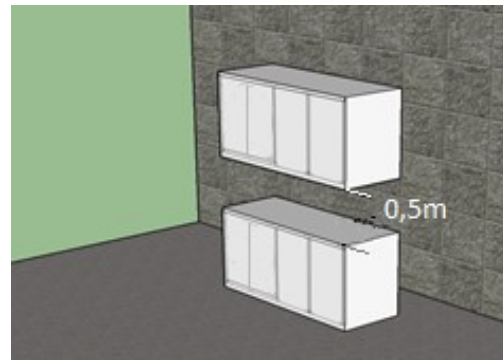

*Vertical installation*

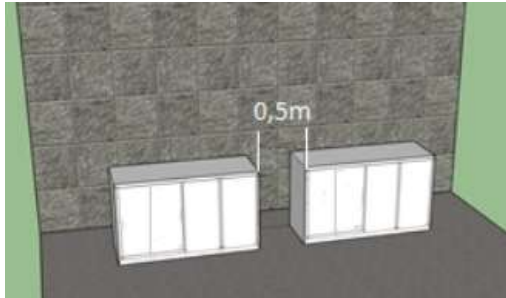

*Horizontal installation*




## 5 Piping details

### 5.1 Pipe Connections (Multi-Split)

The recommended connection between the Condensing Unit and more remote evaporators is the same one used for Multi-Split system.



Basically the system requires a dedicated suction line for each evaporator that will be collected by a manifold installed close to the condensing unit. Please refer to the example reported in the below picture.

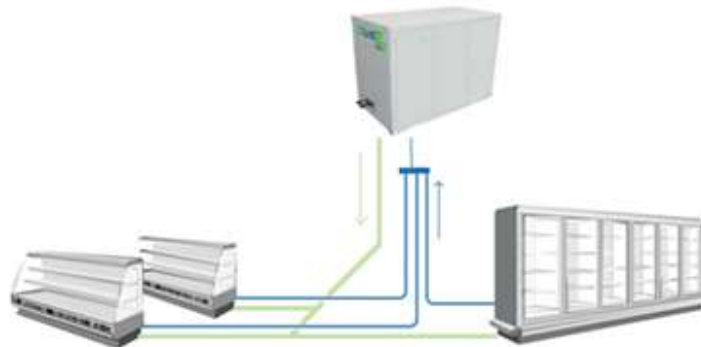

- **PRO:** good compromise solution between oil return and pressure drop issue can be found.
  - **CONS:** higher copper pipe usage but with smaller diameters, easier installation.
- The collector must be properly sized and installed in a horizontal position
  - SCM Frigo recommends connection with up to 3 remote evaporators, and maximum suction pipe length of 20 meters to each evaporator.**
  - Liquid line must be properly sized to supply the farther evaporators (liquid velocity < 1 m/s is suggested). Suction line must be properly sized to have a good oil return with a low pressure drop (gas velocity from 8 to 16 m/s are suggested).

### 5.2 Oil traps

- If UMTT and evaporator are installed at different heights, it is necessary to create piping oil traps. The installation of an oil-trap is recommended (one oil-trap every 2/3 meters of difference in height)

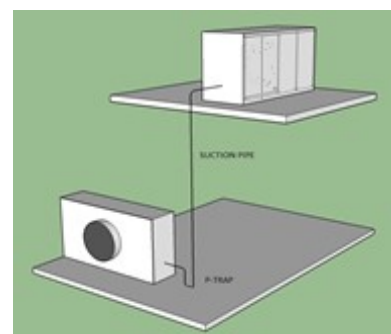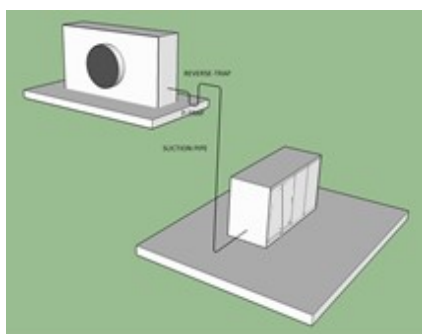

## 6 Test and inspection before start-up

### 6.1 Control of the unit tightness

All units are pressure tested and checked for leaks.

Each unit is delivered with a nitrogen charge pressure of 2 bar.

It is recommended before proceeding with the installation, to check the pressure of the refrigeration system of the unit using a suitable manifold gauge in order to detect possible leaks.

### 6.2 Preliminary controls according to EN 60204-1, visual controls


1. General PE terminal present and identified.
2. All other terminals clearly identified, with the ground symbol or two-colour yellow-green lead.
3. Terminals for exclusive connection to the equipotential connections.
4. Only one lead connected to each terminal.
5. Yellow/green insulation on the ground lead.
6. No live leads with yellow or green insulation.
7. No pipes or raceways used as lead protections.
8. No fuses, switches or circuit breakers on the equipotential protection circuit.
9. Lead sizes conform to the minimum sizes given by current standards.
10. Check the electric connections have been made correctly. Especially the phase connections: open the box with the compressor terminal block, the connections must conform to the diagram given in the compressor electric box.

### 6.3 Management of the system. Configuration of the controllers

The unit is equipped with the controller Carel prackCO2 Hecu, which is managing the working parameters as following

- MT compressor is managed according to suction pressure
- 3way valve to modulate the water flow in the PHE Gas cooler is managed to keep the gas cooler outlet temperature few degrees above the water inlet temperature
- Gas cooler pressure is managed according to the gas cooler outlet temperature in order to achieve the best COP
- Receiver pressure is regulated to be at a fixed set point (38-40 bar)
- All alarms related to compressor and pressure levels are monitored

**Refer to electrical diagram and controller configuration list, attached to this manual, to check the configuration.**

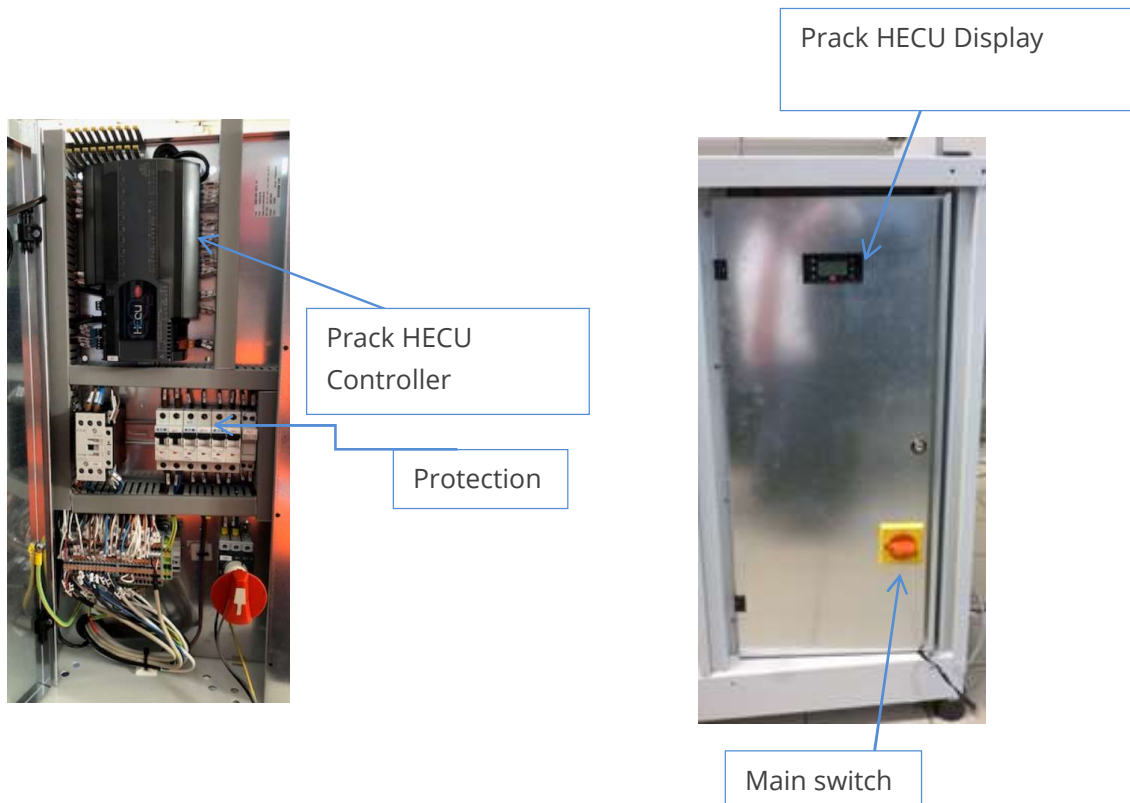

## 6.4 Inspection of the water loop

The cooling of the discharge gas coming from the compressor is occurring inside the PHE Gas Cooler. The PHE installed in the CUBO<sub>2</sub> AQUA is a Gas-Water heat exchanger and the water flow is controlled by a 3Way Modulating Valve according to the Gas Cooler outlet temperature. Before switching on the condensing unit, it is important to be sure that the water loop side is operating properly (both the circulation and water temperature). Suggested Water Inlet temperature (in the GC PHE) range is +7°C ÷ +37°C.

## 6.5 Earth connection

The unit must be connected to the ground line, using the terminal provided by the constructor before the unit is turned on for the first time after installation. The customer is responsible for the connection and the efficient grounding in conformity with current legislation in force and for periodically checking the state of the same.

## 7 Commissioning

The unit leaves the factory without being filled with refrigerant.

The compressor and receiver are pre-charged with oil.

The customer is responsible for charging the system with CO<sub>2</sub> and adding more oil (**only if strictly necessary**).

The instruction given herein are a reminder of the best method to protect the unit, which could be seriously damaged in the event it is not filled correctly.

### 7.1 Evacuation and pre-charge




EEVMAG0000


- Before starting the vacuum procedure, it is necessary to open the high pressure valve (HPV) and the compressor equalization valves.  
**To open the valves a software based function (VACUUM) is available in the Cubo2 AQUA SW (find below some details).**  
 As an alternative you can open the valves manually. HPV valve can be opened with the Carel magnetic tools supplied with unit. (See photo on side). The magnet opening & closing direction is marked on the top – Clockwise to Open.
- Evacuate the system from both the high and low side condensing unit service connections.
- Stop the Vacuum procedure only when the “standing vacuum pressure” reach a value of 0.67mbar. During the vacuum process brake the vacuum several time with dry nitrogen.
- Before starting refrigerant charge, break vacuum WITH ONLY CO<sub>2</sub> VAPOUR (all parts of circuit) up to 10bar pressure to avoid dry-ice production.
- Do not switch on the compressor during this phase!

#### 7.1.1 “VACUUM”, SW function details


This function can be activated only while the unit is in OFF (regulation OFF) and the target is to automatically open HPV and Compressors equalization solenoid valves.

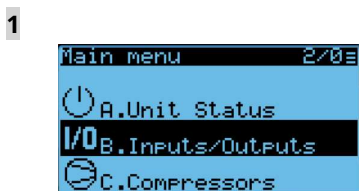


Main menu – Inputs & outputs

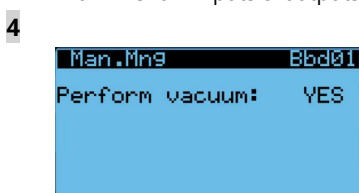


Select “YES” – This will then open HPV and equalization valve according to the settings in mask Bbd02

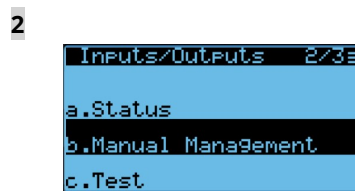

Manual Management

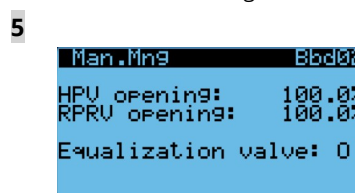

Set the wanted valves status during the Vacuum  
 O = Open / C = Close

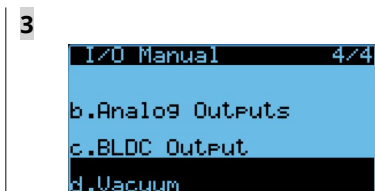

Vacuum



The status on the front screen will now indicate “Unit OFF by vacuum”, in this state the CDU cannot be set in ON. The above step should be reversed prior to charging the unit

## 7.2 Refrigerant & Oil Charging

### 7.2.1 Oil charge




- ☑ All CUBO<sub>2</sub> AQUA are equipped by SCM with an additional pre-charged of 250ml of Oil (type PAG VG100) in the receiver. This info is highlighted with a label applied in the switch panel door.



- ☑ Take care to avoid moisture ingress. PAG oil is extremely hygroscopic! Oil type approved is DAPHNE PZ100S or RENISO PAG100.

### 7.2.2 Procedure for additional oil refill

1. Close valve 1 (89 on circuit diagram)
2. Stop the unit (switch off)
3. Vent gas at valve 1 until pressure drops to 0 bar g (check on display)  
Internal check valve (138 on circuit diagram) will prevent emptying the whole circuit.
4. Charge 125 ml oil at valve 1 – use a manual stirrup pump
5. Evacuate from valve 1 & isolate manifold
6. Slowly open valve 1 & remove manifold when pressure is above 10 bar g
7. Wait for 5 min
8. Re start the unit
9. After 20 min, repeat the procedure to add remaining oil (125 ml)

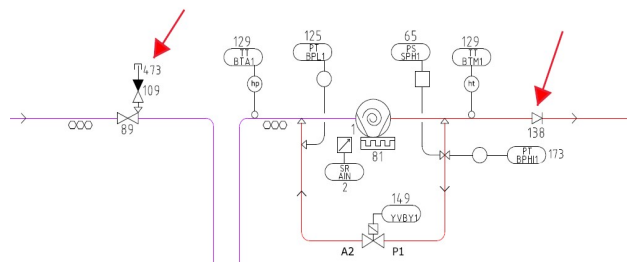

### 7.2.3 Estimation of the refrigerant charge


To get an estimation of total refrigerant quantity to charge in the system you should know:

- Volume of evaporator coil
- Diameter and Length of the piping

The total charge of refrigerant will be the obtained summing up the single quantity needed for the evaporator and for fill the liquid line (refer to the below example).




Regardless from the estimation results, the **minimum recommended CO<sub>2</sub> charged is 4kg**.  
For estimation greater than 4kg the quantity of charged CO<sub>2</sub> must be the estimated one.

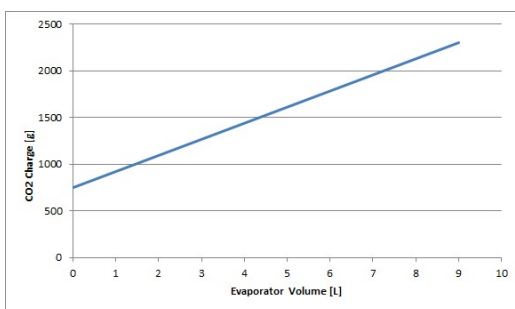

Using this diagram you can calculate refrigerant charge related to the evaporator inner volume.

You can apply also the following formula:  
 $Y \text{ (CO}_2 \text{ charge)} = 172,2222 * X \text{ (Evap.Volume)} + 750$

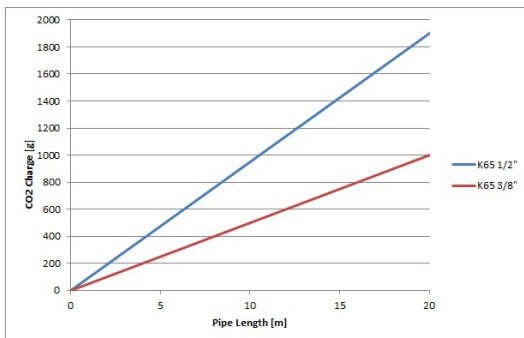

Using this diagram you can calculate refrigerant charge related to the pipe diameter and length.

You can apply also the following formula:  
 $(\text{CO}_2 \text{ charge}) = 50 * X \text{ (Pipe Length K65 3/8\"}$   
 $Y \text{ (CO}_2 \text{ charge)} = 95 * X \text{ (Pipe Length K65 1/2\"}$

Liquid line	Length [m]													
	5	6	7	8	9	10	11	12	13	14	15	16	17	18
K65 - 3/8" (gr)	250	300	350	400	450	500	550	600	650	700	750	800	850	900
K65 - 1/2" (gr)	475	570	665	760	855	950	1045	1140	1235	1330	1425	1520	1615	1710

### Examples of estimated refrigerant charge calculation

**Example 1**

- Evaporator volume: 9lt.  
CO<sub>2</sub> charge calculated the first diagram is: 2300 gr.
- Piping length: 18mt for K65 3/8".  
CO<sub>2</sub> charge calculated form the second diagram: 900 gr.

Total refrigerant charge (estimated): 2300 gr + 900 gr = 3200 gr (< 4000gr).

**Total refrigerant to charge is 4000gr.**

***Example 2***

In case that the evaporating volume is unknown, it is possible to estimate CO<sub>2</sub> charge considering only the pipe length and summing up 2,4 lt (= 2400 gr).

- Piping length: 20mt for K65 1/2".  
CO<sub>2</sub> charge calculated using the second diagram: 1900 gr.

Total refrigerant charge (estimated): 1900 gr + 2400 gr = 4300 gr (> **4000gr**).


**Total refrigerant to charge is 4300gr.**



*Don't overfeed the unit with excessive charge to avoid compressor damaged.*

## 7.2.4 Charging procedure

- For charging, use port 1/4SAE (7/16"-20UNF) on service valve

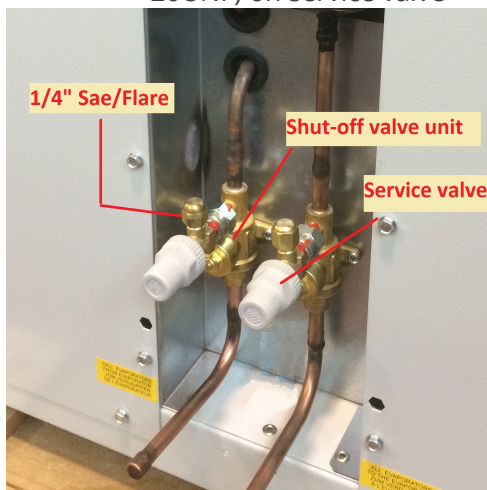

(PS120bar - CASTEL 6110E/X15)

### Important remarks about the CO<sub>2</sub> charging procedure:

- CO<sub>2</sub> of purity class of N4.0 or comparable or with moisture content <10 ppm must be used.
- Charge R744 vapour into the system to a pressure of 10 bar g then liquid charge into the liquid line service port until you have charged the amount specified by the charge estimator.
- Charge CO<sub>2</sub> liquid only from liquid line.
- Charge CO<sub>2</sub> gas only from suction line.
- Never charge CO<sub>2</sub> liquid from suction to prevent the breakdown of the compressor.
- You should top up to achieve a  $\frac{3}{4}$  sight glass, in the liquid receiver, when unit is running. A liquid overfeed can compromise correct regulation of the unit and the reliability of the compressor (liquid return).
- Always check liquid level in different condition, especially in transcritical and defrosting mode.
- Do not mix CO<sub>2</sub> with various other refrigerants.

## 8 User Interface and main Software features

### 8.1 User Interface

Manufacturer PW: 1234

Button meaning		Display meaning
	<b>1</b> Shows active alarms list and accesses to the alarm log. <u>If pressed for more than 5 sec., resets all acknowledged alarms.</u>	<b>A</b> Active alarm preset and manual operation.
	<b>2</b> Used to enter main mask tree.	<b>B</b> Unit status.
	<b>3</b> Return to back mask or higher level.	<b>C</b> Rotation speed of compressor (rps)
	<b>4</b> Scroll a list upwards or increases the value highlighted by the cursor.	<b>D</b> Current Time and date.
	<b>5</b> Scroll a list downwards or decreases the value highlighted by the cursor.	<b>E</b> Operation Suction pressure (bar).
	<b>6</b> Enters in the selected submenu or confirms the changed set values.	<b>F</b> Outlet Gas Cooler pressure (bar).
Led color and meaning		
	Red / blinking	Active alarm and not acknowledged Steady : alarms acknowledged
	Yellow / Fixed	Controller activated
	Green / Fixed	Controller powered



## 8.2 On/Off unit

Even if the unit is powered, it will stay in stand-by (regulation OFF) until the user turns-on the regulation (regulation ON).

The main steps to switch ON the regulation are reported here below:

From main menu, press “Enter” button and appear access with password (see A mask).

Note.

1/0

Current mask / total masks. The horizontal rows mean access level

Hc01


Letters and numbers are the name of mask.



Set password (default: 1234) and press “Enter”.



Select “Unit Status” and press “Enter”.

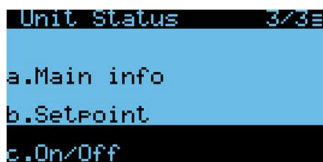

Select “On/off” and press “Enter”



Press “Enter”, to change from off to ON



Press “Enter”, to change from on to OFF.

### 8.3 Regulation set point

```
Main menu 3/03
C.Compressors
D.Condensers
E.Evaporator
```

Select "Compressor" and press "Enter"

```
Compressors 2/73
a.I/O status
b.Regulation
c.Working hours
```

Select "Regulation" and press "Enter"

```
Comp.Regul. Cab01
Regulation mode:
PRESSURE
Regulation type:
FIXED SETP.
```

If there are no serial communication between the CDU and the remote evaporators, compressor will be managed with a fixed setpoint.

```
Comp.Regul. Cab03
Setpoint:
25.5barg
```

Suction set point request.

```
Comp.Regul. Cab14
PID Press. regulation
Prop. band: 12.0barg
Integral time: 180sec
```

P+I regulation mode.

```
Comp.Regul. Cab01
Regulation mode:
PRESSURE
Regulation type:
FLOATING SETP.
```

In case of remote evaporators enabled, regulation type switch automatically from fixed point to floating setpoint

```
Comp.Regul. Cab04
Energy Saving
Maximum floating
setpoint: 29.0barg
Minimum floating
setpoint: 25.5barg
```

Min. and max. setpoint variation admitted.

- ☑ **The above values are the factory settings and can be modified only from specialized people.**
- ☑ **The factory settings doesn't include the evaporator management.**
- ☑ **With the standard factory setting the unit will work based on a fixed suction set-point.**

## 8.4 MPXPRO and ULTRACELLA/EVO CAREL configuration.

- When unit is connected to evaporator controller via RS485, regulation type switch automatically from fixed to floating set-point.

```
Main menu 5/08
C.Compressors
D.Condensers
E.Evaporator
```

Select "Evaporator" and press "Enter"

```
Evaporator 2/48
a.I/O status
b.Configuration
c.Regulation
```

Select "Configuration" and press "Enter"

```
Store Config. Eab00
Ev.1 type:MPX PRO
Ev.2 type:MPX PRO
Ev.3 type:MPX PRO
Ev.4 type:ULTRACELLA
Ev.5 type:ULTRACELLA
```

Type of controllers connected to the CDU

```
Store Config. Eab01
N. of evaporators:5
Ev.1: not conn. 300W
Ev.2: not conn. 1200W
Ev.3: not conn. 1200W
Ev.4: not conn. 2300W
Ev.5: not conn. 2300W
Set default conf.: NO
```

Number of evap. and capacity of each unit

- It is important to set the right serial address for each evaporator installed, with following sequence:
- 11 - 12 - 13 - 14 - 15.**
- Different sequences and address not allowed!
- Set of effective cooling capacity in order to maximize the result of energy savings with floating suction regulation and in case of defrost

```
Store Config. Eab02
Device number: 1
Bus address: 11
Enable device: YES
Description: SKIP
U1
```

Basic information for each evaporator.

"Description": name of refrigerated units

```
Store Config. Eab03
1:U1
On/Off device: OFF
Lights: OFF
```

Start/Stop (On/Off) of evaporating management and light, if present

```
Store Config. Eab04
1:U1
Real time clock:
sync with CDU
DD: 3 mm:12 VV:17
Day of week: 1
HH:11 MM:42
```

Setting real clock for history alarm list

```
Evap. Config. Eab26
Device number: 4
Bus address: 14
Enable device: YES
Description:
Cbbiaaaaaaaaaa
```

```
Evap. Config. Eab27
4:Cbbiaaaaaaaaaa
On/Off device: OFF
```

```
Evap. Config. Eab31
5:Cccaaaaaaaaaaa
Real time clock:
sync with CDU
DD: 3 mm:12 YY:17
HH:10 MM:52
```

Connection to ULTRACELLA

### 8.5 MPXPRO and ULTRACELLA/EVO CAREL regulation

```
Main menu 5/0E
C.Compressors
D.Condensers
+E.Evaporator
```

```
Evaporator 3/4E
a.I/O status
b.Configuration
c.Regulation
```

```
Store Mng Eac01
1:U1
St -Reg.setp.: 2.0°C
rd -Diff.setp.: 20.0°C
PLt: 0.0°C
PHs: 9.0K
```

```
Store Mng Eac02
1:U1
P3 -SH setpoint: 8.0K
P4 -SH Gain: 8.0K
P5 -SH Integral: 350s
P6 -SH Derivat.: 0.0s
P7 -LSH Thresh.: 3.0K
```

```
Store Mng Eac03
1:U1
Smooth lines: ENABLED
PSP: 5.0K
PSI: 120.0sec
PSD: 0.0sec
```

```
Store Mng Eac04
1:U1
Evaporat.Power : 300W
Initial valve position
at startup : 30%
time after defr.:10min
```

Select “Evaporator” and press “Enter”.

Select “Regulation” and press “Enter”.

St	Regulation setpoint
Rd	Differential
PLt	Offset, below the setpoint, to switch off the regulation (Smooth Lines)
PHs	Maximum superheat offset (Smooth Lines)

P3	Superheat setpoint
P4	Control valve: Proportional gain
P5	Control valve: Integral time
P6	Control valve: Derivative time
P7	Low Superheat threshold

PSP	Smooth Line: Proportional gain
PSI	Smooth Line: Integral time
PSD	Smooth Line: Derivative time

## 9 Serial Communication (PSD drivers, Evaporators and Supervisory System)

### 9.1 Communication with evaporators (features and requirements)

CUBO<sub>2</sub> AQUA condensing unit is managed by HECU controller (Carel).

In case the controllers used to manage the refrigerated units are Carel (MPXPRO or ULTRACELLA), they can be connected via RS485 serial line to the HECU.

The main benefits coming from this serial communication between condensing unit and evaporators are:

- ☑ *Optimized oil management with “Oil washing function”*
- ☑ *Optimized suction pressure regulation by using “Floating Setpoint”.*
- ☑ *Evaporator setup and monitoring directly by Cubo<sub>2</sub> AQUA user interface.*

The communication between condensing unit and evaporators controller is allowed only with some specific model of controllers (MPXPRO or ULTRACELLA) equipped with a specific software version. Please, refer to the below tables to check the compatibility.


#### MPXPRO

CUBO <sub>2</sub> AQUA SW version (Hecu)	MPXPRO SW version	Compatible for serial communication (YES/NO)	
		Type of electronic expansion valve	
		EXV Carel	PWM or Tev
2.1.362 or previous	3.3 or higher	YES	NO
2.1.662	3.3 or higher	YES	NO
<b>3.0.12</b>	3.3 or higher	YES	NO

#### ULTRACELLA

CUBO <sub>2</sub> AQUA SW version (Hecu)	ULTRACELLA SW version	Compatible for serial communication (YES/NO)	
		EXV driver model	
		EVD Evo (SW version 5.6 or higher)	EVDice
2.1.362 or previous	Any version	NO	NO
2.1.662	1.9 - 2.0	YES	NO
	<b>2.1</b>	YES	NO
<b>3.0.12</b>	1.9 - 2.0	YES	NO
	<b>2.1</b>	YES	YES

## 9.2 Serial connections and wirings

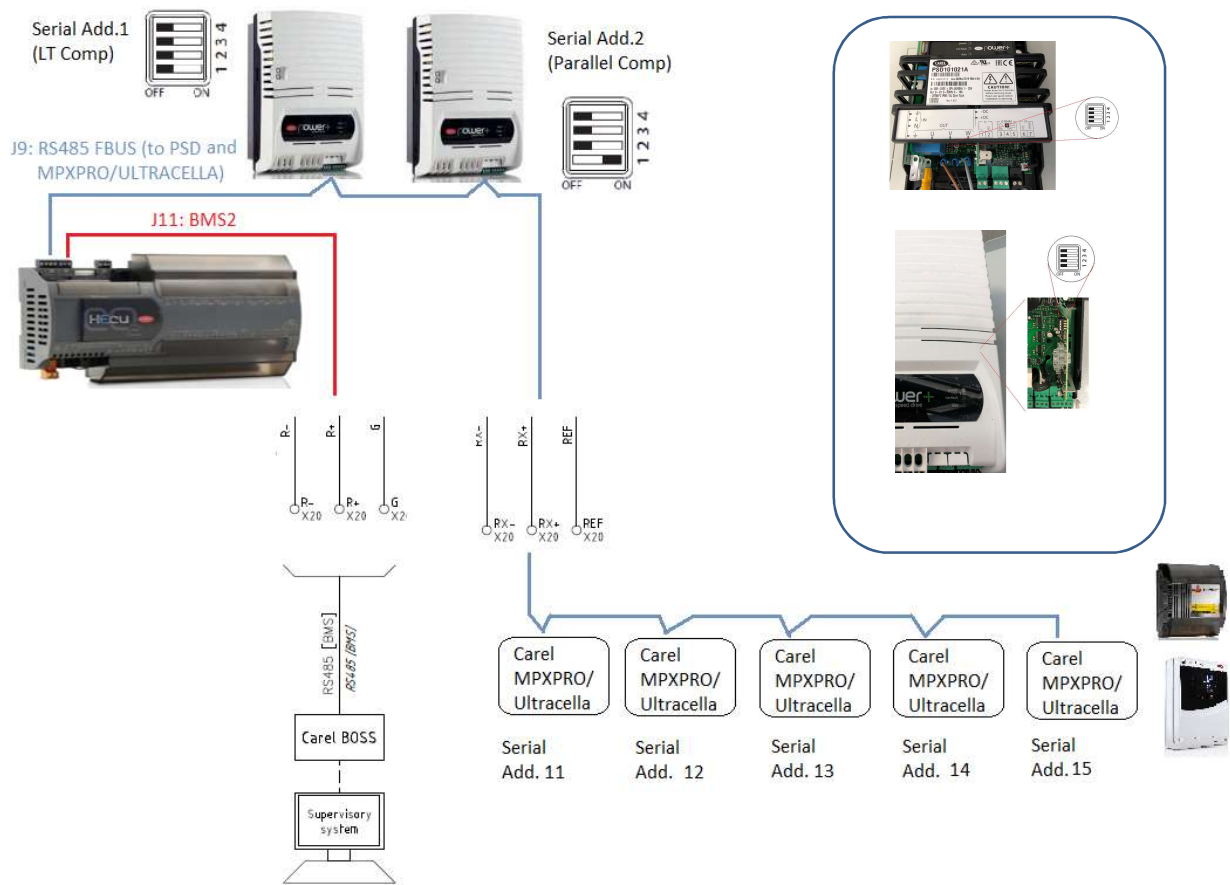

### MPXPRO/ULTRACELLA connector to use for the serial connection with HECU (RX-, RX+, REF)


Carel Controller	Connection Port	Note
MPXPRO		Terminals: GND, Tx/Rx+, Tx/Rx-  Modbus, 19200bps
ULTRACELLA	<p>FieldBus</p> <p>BMS</p> <p>48 47 46 45 44 43</p> <p>49 50 51 52 53 54</p> <p>GND Rx/Tx- GND Rx/Tx- Rx/Tx+</p>	<b>BMS</b> Terminals 52, 53, 54  Modbus, 19200bps

## 10 Recommended Annual Checks

These checks should be carried out in conjunction with the customers' requirements.

<b>Compressor and Inverter Check</b>	
<p>The compressor should be inspected:</p> <ul style="list-style-type: none"> <li>- unusual sounds</li> <li>- unusual vibrations</li> <li>- excessive temperature of the shell</li> </ul>	<ul style="list-style-type: none"> <li>• Check tightness of all electrical terminals.</li> <li>• Check compressor bolting to the base</li> <li>• Control compressor running current is within compressor data</li> <li>• Check the temperature of the body to detect possible lack of lubrication. Top up oil if necessary</li> </ul>
<b>Pressure vessels</b>	
<p>All vessels should be inspected as per local laws and customers' requirements</p>	<ul style="list-style-type: none"> <li>• Inspect insulation for damage and repair as necessary</li> <li>• Investigate for any signs of corrosion</li> <li>• Investigate for any presence of leaks</li> </ul>
<b>Liquid drier</b>	
<p>Liquid drier filter should be replaced every 2 years</p>	<ul style="list-style-type: none"> <li>• Check temperature drop across the filter</li> </ul>
<b>Pressure switch and Pressure Relief Valve</b>	
<p>High pressure switch must be checked to ensure the safe operation of the unit.</p> <p>Check the PRV valve is up to date</p>	<ul style="list-style-type: none"> <li>• Test the correct cut out of the HP pressure switch to ensure activation and reset at correct pressure</li> <li>• Functionality of the electrical circuits must be verified at this point</li> <li>• The PRVs must be tested for refrigerant tightness and replaced as per manufacturers guidelines or customers' requirements</li> </ul>
<b>Unit operation</b>	
<p>The operation of the unit should be checked to detect faults in the controller, valves or sensors.</p> <p>Consult alarm logs</p>	<ul style="list-style-type: none"> <li>• Check operation of HP &amp; MP valves</li> <li>• Check calibration of temperature probes and pressure transducers</li> <li>• Check alarm logs for present and past alarms investigate and correct as necessary</li> </ul>
<b>General overview</b>	
<p>A general inspection should be carried out</p>	<ul style="list-style-type: none"> <li>• Carry out a full system leak test</li> <li>• Repair any missing or broken insulation</li> <li>• Check functionality of all electrical components</li> <li>• Check functionality of pack anti-vibration mounts</li> <li>• Check all pipework and supports</li> <li>• Ensure all valve caps and electrical guards are present.</li> </ul>

## 11 List of alarms


When an alarm occurs in the controller the alarm icon in the user display will be switched ON and it will start to blink (  ).

To get more alarm details you should check the alarm masks available in the display.

These mask contains several information (date and time, description, suct. and disch. Pressure, codes) that could help the user to identify the possible alarm reason and to understand which checks to perform.

Here below some details about how to interpret the different codes shown in the alarm masks.


- Highlighted in **RED** the main alarm reference → Check the HECU alarm table to get more details
- Highlighted in **BLUE** the PSD (POWER+) alarm code → Check the PSD (Power+) alarm table to get more details
- Highlighted in **GREEN** the Envelope Zone that caused a compressor shut-off → Check the Envelope Zone table to get more details (at page 33)

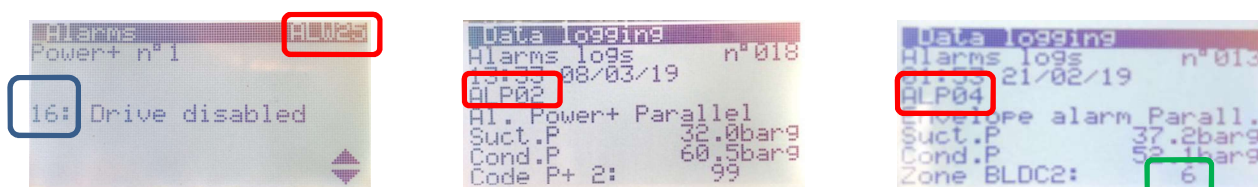

### 11.1 Hecu alarm

In the below table we reported a quick description about the Condensing Unit alarm with the main action made by the controller.

The alarm Index to refer is the one reported in the alarm masks or in the alarm logs (please find an example in the below picture. The Mask Index is the one highlighted in red).



Mask index	Topic	Description	Serious alarm	Normal alarm	Action	Delay	Reset
ALU02	PROBES	Regulation probes missing. One of the main probe is missing or wrong configured: P_suc, P_GC, T_out_GC, P_receiver or Pparallel_Suct	x		Shutdown Unit	No delay	Automatic
ALA01		Discharge temperature probe broken or disconnected. Discharge temperature probe could be broken, disconnected or not properly configured		x	No action on the regulation The function that reduce the compressor speed to prevent High Discharge temperature will be disabled (mask Hb02 and Hb03)	No delay	Automatic



Mask index	Topic	Description	Serious alarm	Normal alarm	Action	Delay	Reset
ALA02	GAS COOLER PRESSURE	Gas cooler pressure probe broken or disconnected. Gas cooler pressure probe broken, disconnected or not properly configured		x	No action on the regulation The opening of HPV valve will be fixed at a safety value settable in mask Fhb13	No delay	Automatic
ALA03		External temperature probe broken or disconnected. External temperature probe could be broken, disconnected or not properly configured		x	All Functions managed by this probe will be disabled: - Floating Condensing setpoint - auto-switch of regulation on T_ext in case of T_outlet_GC is fault (mask Dag14) - speed up opening of gas cooler 3way-valve according to T_ext (mask Dag13)	No delay	Automatic
ALA24		Suction pressure probe broken or disconnected. Suction pressure probe broken, disconnected or not properly configured	x		Shut off of LT/MT compressor (according to the setting made on mask Cag03)	No delay	Automatic
ALA25		Suction temperature probe broken or disconnected. Suction temperature probe broken, disconnected or not properly configured		x	No action on the regulation	No delay	Automatic
ALA43		gas cooler out temp.probe broken. Gas Cooler outlet temperature probe broken, disconnected or not properly configured	x		Shut off Gas Cooler 3Way Valve	No delay	Automatic
ALA44		Receiver pressure probe broken, disconnected or not properly configured	x		No action on the regulation RPRV will open at a safety position(settable by Fhb26)	No delay	Automatic
ALB02		Common high condensing pressure switch alarm. High Pressure pressure switch (for Parallel/MT compressor). It is active when Gas Cooler pressure is higher than the pressure switch threshold	x		Shut off Parallel/MT compressor	Settable (by mask Hc01)	Automatic / manual
ALB03		Low condensing pressure alarm. Gas Cooler pressure is lower than the threshold set in the mask De07	x		Shut off the Gas Cooler 3Way-Valve	Settable (by mask De03)	Automatic
ALB04		High condensing pressure alarm. Gas Cooler pressure is higher than the threshold set in the mask De06	x		Forces Gas Cooler 3Way-Valve at 100%	Settable (by mask De01)	Automatic
ALB15		SUCTION PRESSURE	High suction pressure. Suction pressure higher than alarm threshold (settable by mask Cae24)		x	No action	Settable (by mask Cae25)
ALB16	Low suction pressure. Suction pressure (read by probe) lower than the alarm threshold (settable by mask Cae26)			x	Shut off LT/MT compressor (settable by mask Cae27)	Settable (by mask Cae27)	Automatic

Mask index	Topic	Description	Serious alarm	Normal alarm	Action	Delay	Reset
ALB21	<b>GAS COOLER PRESSURE</b>	Blocking alarm for high pressure prevent. When GC pressure rises above the prevent threshold the compressor speed is reduced up to switch off the compressor. The threshold is settable in mask Hb01	x		Decrease the compressor speed and after a delay Shut off the compressor	No delay	Automatic / manual
ALG01	<b>GENERIC</b>	AI_Clock. No communication between CPU and Internal clock		x	Disable all functions involving scheduler	No delay	---
ALG02		Extended memory error. Faulty controller	x		Shut off the unit	No delay	---
ALG03	<b>EVAPORATORS</b>	Unreliable condition because of no MPXPRO connected. The unit will switch OFF in xx hours. System shut off the unit when some controller for evaporators have been configured in fieldbus but they result off-line		x	Shut off the unit	---	---
ALT15	<b>SUPERHEAT</b>	Low shuperheat alarm. Low SH alarm settable by mask Cae30 (threshold and delay). A warning for Low SH will be issued without any delay		x	No action (by default). A compressor shut off can be configured by mask Cae30	Settable by mask Cae30	Automatic / manual (settable by mask Cae30)
ALT19		DSH Low liquid flowback. This alarm occurs when suction SH is lower than 0 K AND discharge SH (DSH) is lower than 10 K for a period higher than the one set in mask Cae41		x	Shut off compressor	Settable by mask Cae41	Automatic / manual (default)
ALT20	<b>TRANSKRITICAL</b>	HPV Valve position warning. HPV valve opening is higher that a threshold for a certain time (settable by mask Fhb30)		x	No action	Settable by mask Fhb30	Automatic
ALT21		RPRV valve opening is higher thnt a threshold for a certain time (settable by mask Fhb31)		x	No action	Settable by mask Fhb31	Automatic
ALT17		Warning setpoint HPV. Gas cooler press.too low/high, different from current setpoint. Difference between Gas Cooler Pressure and HPV setpoint is greater than the threshold set on mask Fhb20 (disabled by default).		x	No action	Settable by mask Fhb20	Automatic
ALT18		High receiver pressure alarm. Receiver Pressure higher than alarm threshold settable by mask Fhb28		x	Shut off compressor (according to configuration made in mask Cbe42 and Fhb28)	Settable by mask Fhb28	Automatic
ALW10	<b>SUPERHEAT</b>	Warning low superheat. Suction SH of MT/LT compressor lower than alarm threshold (set on mask Cae30). No delay is used to issue the warning.		x	No action (it is just a warning)	No delay	Automatic


Mask index	Topic	Description	Serious alarm	Normal alarm	Action	Delay	Reset
ALW24	LT COMPRESSOR	Power plus device offline. No communication between HECU controller and PSD (Inverter for compressor BLDC)	x		Shut Off compressor	No delay	Automatic
ALW25		Power+ inverter alarm. Generic Alarm of the PSD (LT/MT compressor). More details about the alarm code of the inverter is reported in the same mask.		x	Shut Off compressor	No delay	Automatic
ALW26		Compressor start failure. Delta Pressure between suction and discharge does not increase after the compressor start	x		Compressor shut off. Compressor restarts after a delay if this alarm does not occur more than 5 times in 60 minutes	Settable by mask Cag51	Automatic/manual (if it occurs more than 5 times in 60 minutes)
ALW27		Envelope alarm. Compressor is working out of admitted envelope. The current operating zone is reported in the same mask		x	Shut Off compressor	Settable by mask Cag55	Automatic
ALW28		High discharge gas temperature. Discharge temperature measured by the probe is higher than the Alarm threshold set on mask Hb02	x		Shut Off compressor	No delay	Automatic
ALW29		Compressor Low pressure differential (insufficient lubrication). Low delta pressure between suction pressure and discharge pressure		x	No Action	Settable by mask mask Cag55	Automatic
ALW30		Inverter model not compatible (Power+ only allowed). The inverter model is not compatible with the compressor size configured on mask Cag12		x	Compressor does not start	No delay	Automatic
ALW40-53-66-79-92		EVAPORATORS	Store number: !! OFFLINE !!	x		- Not present R2 2	
ALW41-54-67-80-93	Store number: Low temperature alarm [Generic Probe 1]			x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW42-55-68-81-94	Store number: High temperature alarm [Generic Probe 1]			x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW43-56-69-82-95	Store number: Low temperature alarm [Generic Probe 2]			x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW44-57-70-83-96	Store number: High temperature alarm [Generic Probe 2]			x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW45-58-71-84-97	Store number: Defrost timeout			x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW46-59-72-85-98	Store number: Low superheat alarm			x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW47-60-73-86-99	Store number: Low suction temp.alarm			x	Display only (refer to MPXPRO / Ultracella user manual)		

Mask index	Topic	Description	Serious alarm	Normal alarm	Action	Delay	Reset
ALW48-61-74-87-ALZ00		Store number: MOP alarm		x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW49-62-75-88-ALZ01		Store number: LOP alarm		x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW50-63-76-89-ALZ02		Store number: Stepper driver communication error		x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW51-64-77-90-ALZ03		Store number: Stepper motor error		x	Display only (refer to MPXPRO / Ultracella user manual)		
ALW52-65-78-91-ALZ04		Store number: Installation or config problems on EEV driver		x	Display only (refer to MPXPRO / Ultracella user manual)		

## 11.2 PSD (Power+) alarm code

In the below table we reported a quick description about the PSD alarm code could occur in the unit with the possible causes and solutions.

The PSD (Power+) alarm code is reported in the alarm masks or in the alarm logs (please find an example in the below picture).

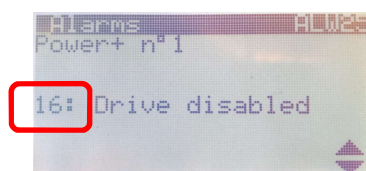


Alarm code	Description	Possible cause	Solutions
0	No alarm	-	-
1	Overcurrent	The drive has detected a current supplied that is too high due to: - sudden strong load increase; - acceleration that is too high; - wrong parameters values or inadequate motor.	Check the load, the dimension of the motor and the cables. Decrease acceleration. Check the motor parameters..
2	Motor overload	The current supplied has exceeded the motor rated current over the maximum time accepted	Check the load, the dimension of the motor and the cables. Check the motor parameters.
3	Overvoltage	The DC voltage of the intermediate circuit has exceeded the limits envisioned due to: - deceleration that is too high; - high over-voltage peaks on the power supply network.	Decrease deceleration.
4	Undervoltage	The DC voltage of the intermediate circuit is below the limits envisioned due to: - insufficient power supply voltage; - fault inside the drive.	In the event of temporary cut-off of the power supply, reset the alarm and re-start the drive. Check the power supply voltage.
5	Drive overtemperature	The temperature inside the drive has exceeded the maximum level allowed.	Check that the quantity and flow of cooling air are regular. Check that there is not dust in the heat sink. Check the environment temperature. Ensure that the switching frequency is not too high with respect to the environment temperature and the motor load.
6	Drive undertemperature	The temperature of the drive is inferior to the minimum level allowed.	Warm up the ambient where the drive is installed.
7	Overcurrent HW	The drive has detected an instantaneous current supplied that is too high due to: - sudden strong load increase; - motor cables short circuit;	Check the load, the dimension of the motor and the cables. Check the motor parameters.

Alarm code	Description	Possible cause	Solutions
		- wrong parameters values or inadequate motor.	
8	<b>Motor overtemperature</b>	The temperature detected by the PTC thermistor corresponds to a resistance > 2600 ohm.	Reduce the motor load. Check motor cooling.
9	<b>Reserved (for future use)</b>		
10	<b>CPU error</b>	Loss of data in memory	Call for assistance
11	<b>Parameter default</b>	Execution of reset parameter default command; Parameters user setting corrupted	Set parameters again
12	<b>DCbus ripple</b>	Input power supply phase loss, three-phase power supply unbalance	Check the input power supply phases to the drive, reduce motor power (speed)
13	<b>Data communication fault</b>	Data reception failure	Check the serial connection. Switch the drive off and back on again.
14	<b>Drive thermistor fault</b>	Internal fault	Call for assistance
15	<b>Autotuning fault</b>	Wrong parameter values	Check the parameter values Restart the command again
16	<b>Driver disabled (STO input open or de-energized)</b>	Cable disconnected Operation of external contactor 24V power supply loss	Check the wiring. Restore external contactor
17	<b>Motor phase fault (**)</b>	Motor cable disconnected	Check the connections of the motor cable
18	<b>Reserved (for future use)</b>		
19	<b>Speed fault</b>	Wrong parameters values or unsuited load	Switch the drive off and back on again and check the parameters are properly set. Check the motor load.
20	<b>PFC module error</b>	PFC overcurrent	Call for assistance
21	<b>Power supply overvoltage</b>	Too high power supply voltage	Check input power supply and if inductive load generating overvoltage are connected to the line
22	<b>Power supply undervoltage</b>	Too low power supply voltage	Check input power supply
23	<b>STO detection error</b>	Internal fault	Call for assistance
24	<b>Reserved (for future use)</b>		
25	<b>Ground fault</b>	The drive has detected a ground current too high	Check ground insulation of the motor and wires .
26	<b>CPU sync error 1</b>	Overload CPU	Call for assistance
27	<b>CPU sync error 2</b>	Loss of data in memory	Call for assistance
28	<b>Drive overload</b>	The current supplied has exceeded the drive rated current over the maximum time accepted	Check the load, the dimension of the motor and the cables. Check the motor parameters.

Alarm code	Description	Possible cause	Solutions
99	<b>Overload Alarm</b>	This alarm occurs when there is a misalignment between the RUN command provide by the controller and the internal status of PSD (that is in OFF)	Check power supply stability (this behaviour can happen if there are some undervoltage peak in the main power supply).

### 11.3 PSD led status

In case of PSD alarm, could be useful to check also the led status directly in the PSD.

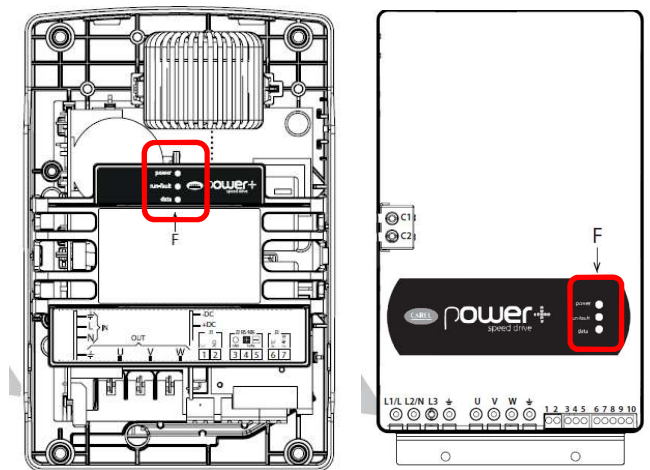

Led	Status/color	Description
Power	green	drive powered
RUN/Fault	green	drive is running
	red	fault
DATA	yellow	communication active



## 12 Troubleshooting

Symptom/alarm	Possible Cause	Check
Probes alarm/ wrong reading	<ul style="list-style-type: none"> <li>- wrong connection</li> <li>- wrong configuration</li> <li>- wrong range (for pressure probe)</li> <li>- wrong type of probe</li> <li>- wrong placement of probe</li> <li>- broken probe</li> </ul>	Check the connection and the configuration of the probe: <ul style="list-style-type: none"> <li>- type of probe</li> <li>- wirings</li> <li>- probes range (min and max)</li> <li>- compare the value read by the probe with the value read by a manometer</li> </ul>
Missing communication between Hecu and PSD (power+/Inverter)/ ALW24	<ul style="list-style-type: none"> <li>-Power plus device offline.</li> <li>-No communication between HECU controller and PSD (Inverter for compressor BLDC)</li> </ul>	<ul style="list-style-type: none"> <li>- check the PSD power supply (it must be powered)</li> <li>- check the RS485 wiring between HECU and PSD</li> <li>- check the serial address set in the PSD (dip switch configuration)</li> <li>-check the PSD address set in the HECU controller</li> </ul>
MT compressor does not start	<ul style="list-style-type: none"> <li>- Some blocking alarm is forcing off the compressor</li> <li>- Regulation status of the unit is OFF</li> <li>- Most of evaporators are performing a defrost (only if evaporator controllers are connected to the CDU via RS485)</li> <li>- Wrong configuration of PSD (power+ driver)</li> </ul>	<ul style="list-style-type: none"> <li>- Check the active alarm and try to reset the alarm (consulting the alarms table suggestions)</li> <li>- Switch ON the unit</li> <li>- Check the Defrost setting on mask FBB15 (only if evaporator controllers are connected to the CDU via RS485)</li> <li>- Force the download settings from Hecu Controller to PSD</li> </ul>
Missing communication between Hecu and evaporators (MPXPRO/ULTRACELLA)/ ALW37	<ul style="list-style-type: none"> <li>- Wrong connection of serial line</li> <li>- Wrong serial address setting</li> </ul>	<ul style="list-style-type: none"> <li>- Check the RS485 wirings/connection</li> <li>- Check the serial address set in the evaporator controller</li> <li>- Check the protocol and baudrate (Modbus, 19200bps)</li> </ul>
Low SH alarm or DSH alarm (ALW10/ ALT15/ ALT15)	<ul style="list-style-type: none"> <li>- Liquid is coming back to the compressor</li> <li>- Wrong reading of SH probes (temp. and pressure)</li> <li>- Wrong reading of discharge temp probe</li> </ul>	<ul style="list-style-type: none"> <li>- Check the SH in the evaporator</li> <li>- Check the right operation of Expansion valve in the evaporator</li> <li>- Check the position of the probe and be sure they are reading properly</li> <li>- (for MT Comp or Parallel comp) check that liquid is not coming back from RPRV valve. This can happen in case of an overcharge of refrigerant</li> </ul>




### 13 Compressor Envelope

Compressor envelope zone consists in the safety area (Suction/discharge pressure) where compressor is allowed to run without problem.

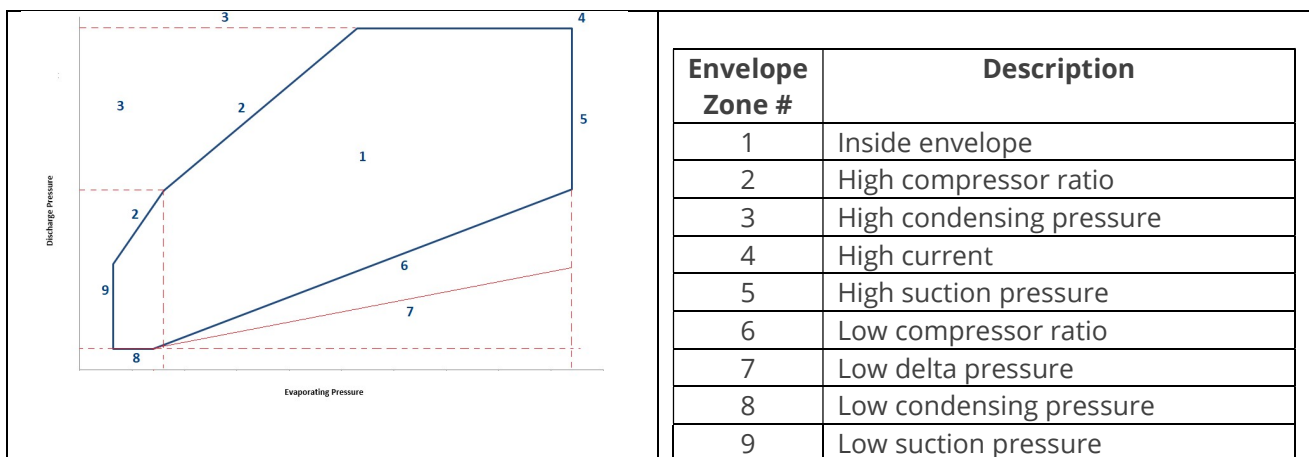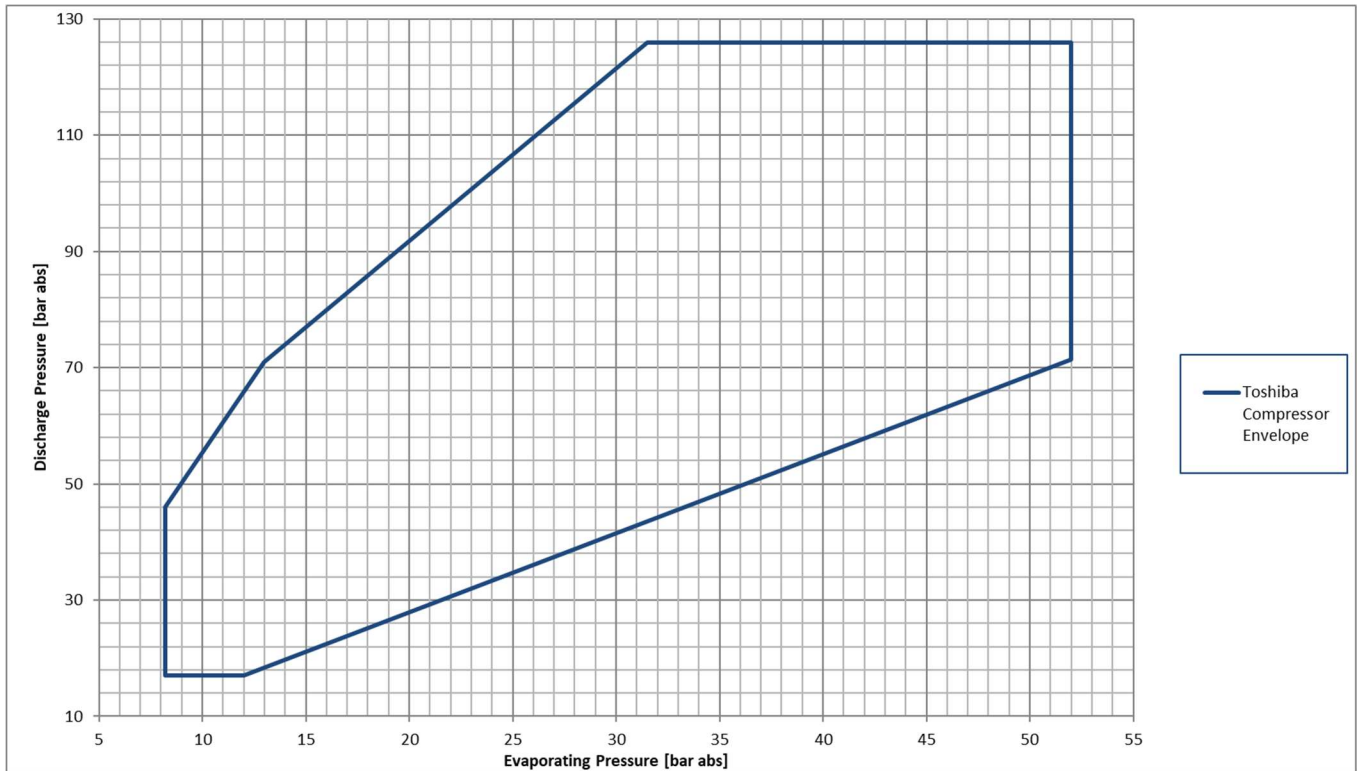


## 14 Refrigerant drawing (P&I)

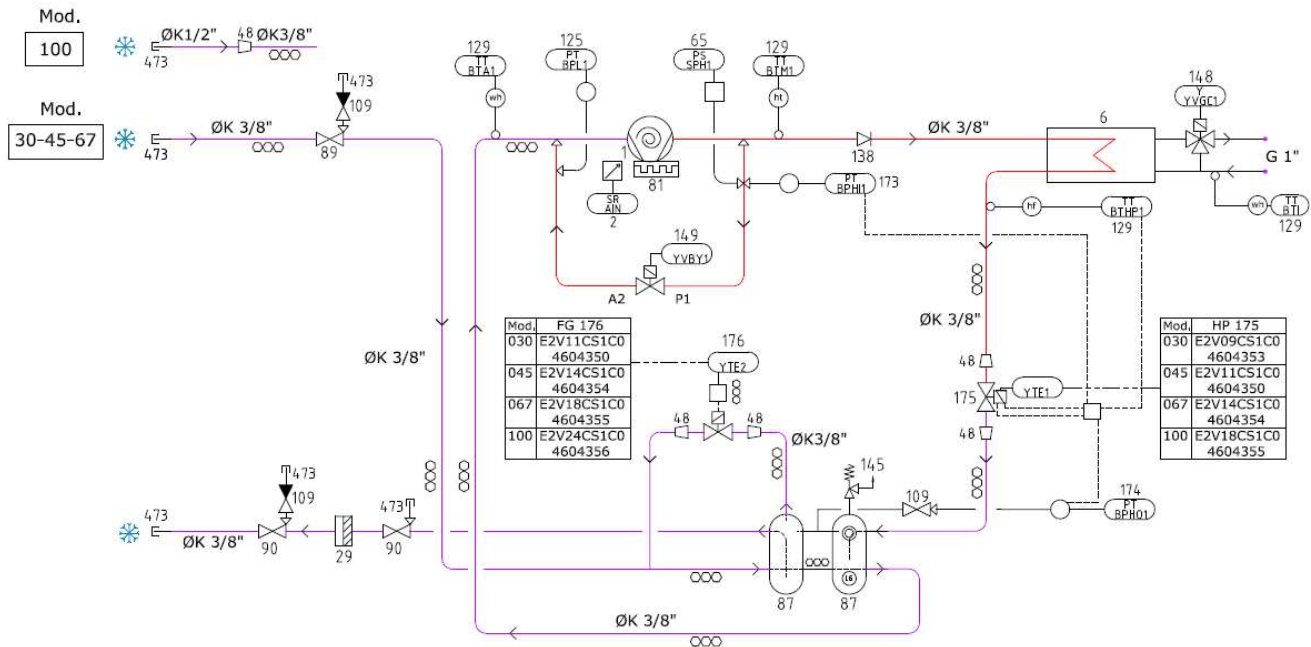

Pos.	Ref.	Description	Note 1	Note 2
1	1	Rotary Compressor		
2	2	Inverter		
3	6	Gas Cooler PHE		
4	148	3 Way Valve		
5	29	Refrigerant filter Dryer		
6	65	HP safety switch (PZH)		
7	87	Liquid receivers (parallel)		
8	89	Suction shut-off valve		
9	90	Liquid shut-off valve		
10	109	Service valve		
11	125 (BPL1)	Low pressure transducer		
12	129 (BTA1)	Comp. Suction temperature probe		
13	129 (BTM1)	Comp. Discharge temperature probe		
14	129 (BTEI)	Water In temperature probe		
15	129 (BTHP)	GC outlet temperature probe		
16	138	Check valve		
17	145	Pressure Relief Valve		
18	149 (YVBY)	By-pass solenoid valve		
19	173 (BPHI1)	Discharge pressure transducer		
20	174 (BPHO1)	Receiver pressure transducer		
21	175 (YVTE)	High Pressure Valve (HPV)		
22	176 (YVBY1)	Receiver Pressure Valve (RPRV)		

## 15 HECU Controller layout

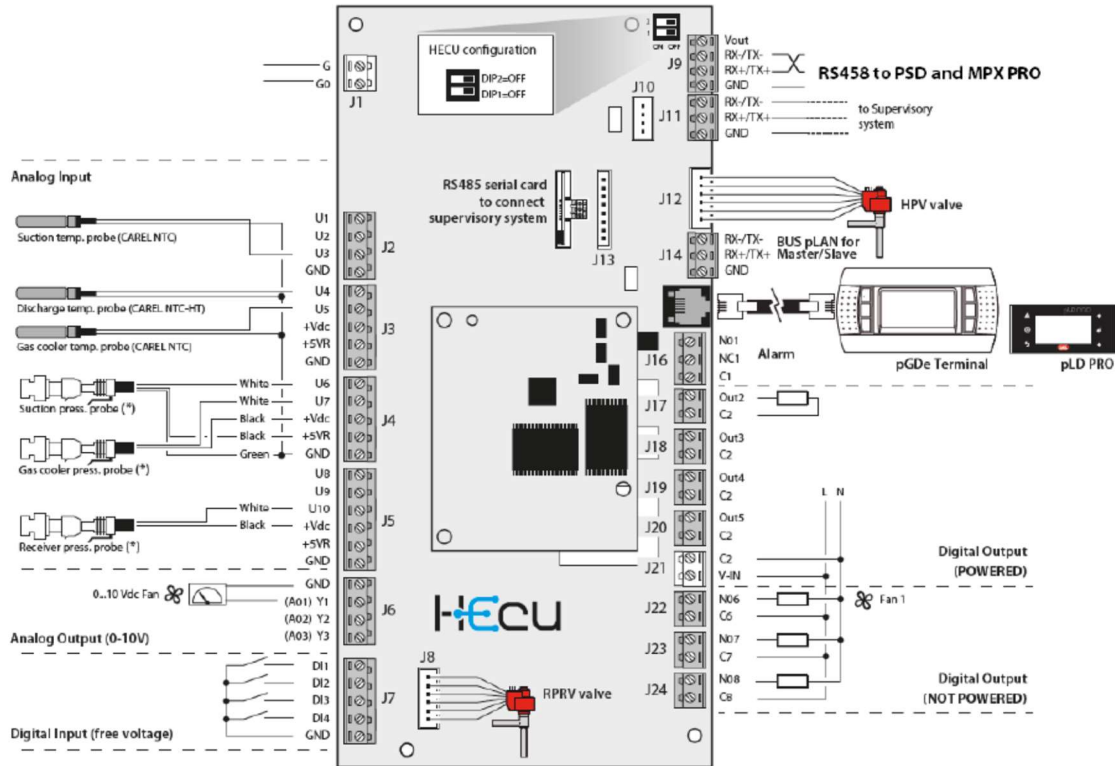


Analog Inputs		Digital Inputs		Analog Output		Digital Output	
U1	-	DI1	ON/OFF remote	Y1	Modulating Valve (Water-In GC)	NO1-C1	Serious alarm
U2	Ambient temperature (Water-In temp.)	DI2	High pressostat alarm	Y2	-	NO2-C2	-
U3	Suction temp. MT	DI3	Evaporator Request	Y3	-	NO3-C3	-
U4	Discharge temp. MT	DI4	Change Setpoint			NO4-C4	-
U5	Gas Cooler Outlet temp.	DI5	-			NO5-C5	-
U6	Suction pres. MT					NO6-C6	By-pass solenoid valve MT
U7	Discharge pres. Trans. MT /GC pressure)					NO7-C7	Compressor Ready
U8	-					NO8-C8	Cabinet washing
U9	-						
U10	Receiver pres.						

## 16 Terminals blocks connection

- ☑ BMS serial connection, use terminal blocks:  
R-; R+; G.
- ☑ On/off remote, use terminal blocks:  
DI1; GND3 (Remove bridge also present).
- ☑ Remote digital alarm, use terminal blocks:  
NO1; C (closed in case of alarm).
- ☑ CAREL Remote evap. lan, use terminal blocks:  
Rx-; Rx+; REF.
- ☑ Adiabatic ramp power supply, use terminal blocks: L30; N30; PE.

## 17 Dimensional drawing

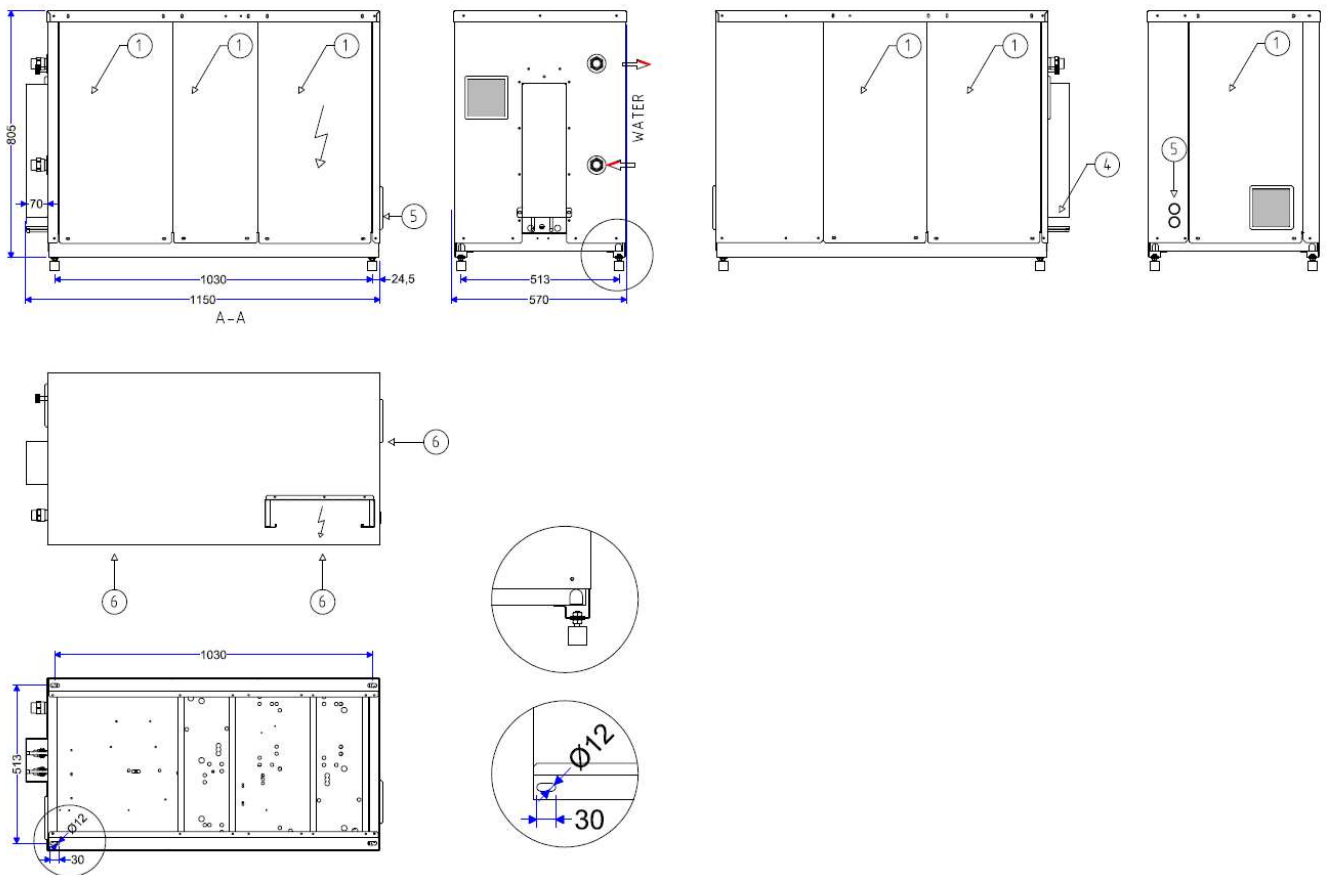

## 18 General information and limits

General Characteristics						
Cubo2 AQUA line models	UMT/WG T 030 MT DX	UMT/WG T 045 MT DX	UMT/WG T 067 MT DX	UMT/WG T 100 MT DX		
Compressor Motor	Refrigerant	R744 (CO <sub>2</sub> )				
	Toshiba Rotary Compressor	DY30N1F-10FU	DY45N1F-10FU	DY67L1F-10FU	RY100L1F-10FU	
	Number of cylinders	1	1	2	2	
	Number of poles	4				
	Moto type	DC Brushless				
	Revolution range	25 ≈ 100 rps	25 ≈ 100 rps	25 ≈ 100 rps	25 ≈ 100 rps	
	Oil charged	520 ml	520 ml	450 ml	450 ml	
	Oil type	PAG VG100				
	Discharge working pressure range	125 bar max	125 bar max	125 bar max	125 bar max	
	Suction working pressure range	12 ≈ 41 bar	12 ≈ 41 bar	12 ≈ 41 bar	12 ≈ 41 bar	
	Evaporating temperature	-15 °C ≈ +5 °C				
	Susction Superheating	10 K ≈ 20 K				
	System	Discharge temperature	max 130 °C			
Ambient temp.		-15 °C ≈ +40 °C				
Water Inlet temp		-20 °C only with winter kit option				
Receiever		+7 °C ≈ +37 °C				
Suction line		2x 2,4 lt (2,4 lt Receiver max charge)				
Liquid line		3/8" K65 (9,52mm)	3/8" K65 (9,52mm)	3/8" K65 (9,52mm)	1/2" K65 (12,70mm)	
PS Suction / Liquid		3/8" K65 (9,52mm)	3/8" K65 (9,52mm)	3/8" K65 (9,52mm)	3/8" K65 (9,52mm)	
PED Category		80 bar / 80 bar				
Generic	Dimensions (AxBxH)	1150 x 570 x 805 mm				
	Trasport dimensions (AxBxH)	1300 x 700 x 950 mm				
	Weight	150 Kg				
	Transport way	Pallet & Carton				
	Painted	RAL 7035				
	Sound level (max speed) <sup>1)</sup>	41 dBA	41 dBA	41 dBA	41 dBA	

<sup>1)</sup> Sound pressure and sound power analytically calculated. Sound pressure level at 10 m in free field.

## 19 Electrical details

Electrical Information				
Cubo2AQUA line Size	UMT/WG T 030 MT DX	UMT/WG T 045 MT DX	UMT/WG T 067 MT DX	UMT/WG T 100 MT DX
Power Suply	230V/1Ph+N+PE/50Hz			400V/3Ph+N+PE/50Hz
Recommended protection	Circuit Breaker 1+N C16A	Circuit Breaker 1+N C16A	Circuit Breaker 1+N C25A	Circuit Breaker 3P C20A
MRA	9,4 A	13,9 A	20,9 A	15,1 A
P abs max	2115 W	3155 W	4765 W	7560 W
MRA = Maximjum Rated Abs.				

- ☑ Unit is made in accordance with EN-60204-1. All electrical cabling, in external unit, have been made in accordance with EN-60204-1. All connection must be done by qualified persons according to legal standards in force in the relevant countries and to EN-60204-1. Supply cable must be connected on terminal of upstream main switch. Connect wire of ground (PE), from specific terminal block to system protection.

## 20 Cooling capacity Table

UMTT 030 MTDX (DY30)		[Tentative Data]				
Cooling Capacity [W] SC:0 K - SH:10 K						
Min speed		Evaporating SST				
		-15	-10	-5	0	5
	T <sub>water</sub> in °C	21,9	25,5	29,5	33,9	38,7
	38	451	546	644	756	882
	32	487	592	696	814	958
	20	605	730	857	989	1198
	10	762	905	1045	1209	1431

Max speed		Evaporating SST				
		-15	-10	-5	0	5
	T <sub>water</sub> in °C	21,9	25,5	29,5	33,9	38,7
	38	2178	2543	2925	3337	3774
	32	2241	2641	3045	3482	3976
	20	2710	3196	3679	4153	4901
	10	3429	3994	4527	5127	5925

UMTT 045 MTDX (DY45)		[Tentative Data]				
Cooling Capacity [W] SC:0 K - SH:10 K						
Min speed		Evaporating SST				
		-15	-10	-5	0	5
	T <sub>water</sub> in °C	21,9	25,5	29,5	33,9	38,7
	38	680	825	972	1135	1324
	32	741	887	1060	1250	1473
	20	913	1082	1294	1568	1809
	10	1183	1401	1614	1943	2160

Max speed		Evaporating SST				
		-15	-10	-5	0	5
	T <sub>water</sub> in °C	21,9	25,5	29,5	33,9	38,7
	38	3289	3840	4417	5028	5682
	32	3402	3966	4624	5321	6084
	20	4096	4739	5556	6594	7400
	10	5323	6190	7002	8102	8946

UMTT 067 MTDX (DY67)		[Tentative Data]				
Cooling Capacity [W] SC:0 K - SH:10 K						
Min speed		Evaporating SST				
		-15	-10	-5	0	5
	Twater in °C	21,9	25,5	29,5	33,9	38,7
	38	1073	1279	1496	1735	1975
	32	1133	1361	1590	1862	2115
	20	1404	1657	1945	2283	2641
	10	1891	2157	2467	2818	3253

Max speed		Evaporating SST				
		-15	-10	-5	0	5
	Twater in °C	21,9	25,5	29,5	33,9	38,7
	38	4743	5503	6334	7225	8129
	32	4758	5615	6496	7489	8416
	20	5638	6586	7640	8829	10026
	10	7398	8375	9478	10671	12091

UMTT 100 MTDX (RY100)		[Tentative Data]				
Cooling Capacity [W] SC:0 K - SH:10 K						
Min speed		Evaporating SST				
		-15	-10	-5	0	5
	Twater in °C	21,9	25,5	29,5	33,9	38,7
	38	1596	1889	2216	2568	2948
	32	1692	1994	2345	2725	1095
	20	2036	2417	2846	3306	3982
	10	2645	3052	3489	3999	4619

Max speed		Evaporating SST				
		-15	-10	-5	0	5
	Twater in °C	21,9	25,5	29,5	33,9	38,7
	38	7087	8215	9440	10754	12134
	32	7101	8290	9624	11038	12347
	20	8207	9638	11211	12834	15097
	10	10397	11894	13457	15208	17237

## 21 Conversion pressure-temperature CO<sub>2</sub> (R744)

Temperature		Pressure	
(°C)	(°F)	(Bar-abs)	(psig)
-50.0	-58.0	6.8	84
-49.0	-56.2	7.1	88
-48.0	-54.4	7.4	93
-47.0	-52.6	7.7	97
-46.0	-50.8	8.0	101
-45.0	-49.0	8.3	106
-44.0	-47.2	8.6	111
-43.0	-45.4	9.0	116
-42.0	-43.6	9.3	121
-41.0	-41.8	9.7	126
-40.0	-40.0	10.0	131
-39.0	-38.2	10.4	136
-38.0	-36.4	10.8	142
-37.0	-34.6	11.2	148
-36.0	-32.8	11.6	154
-35.0	-31.0	12.0	160
-34.0	-29.2	12.5	166
-33.0	-27.4	12.9	172
-32.0	-25.6	13.3	179
-31.0	-23.8	13.8	185
-30.0	-22.0	14.3	192
-29.0	-20.2	14.8	199
-28.0	-18.4	15.3	207
-27.0	-16.6	15.8	214
-26.0	-14.8	16.3	222
-25.0	-13.0	16.8	229
-24.0	-11.2	17.4	237
-23.0	-9.4	17.9	245
-22.0	-7.6	18.5	254
-21.0	-5.8	19.1	262
-20.0	-4.0	19.7	271
-19.0	-2.2	20.3	280
-18.0	-0.4	20.9	289
-17.0	1.4	21.6	298
-16.0	3.2	22.2	308
-15.0	5.0	22.9	317
-14.0	6.8	23.6	327
-13.0	8.6	24.3	338
-12.0	10.4	25.0	348
-11.0	12.2	25.7	359
-10.0	14.0	26.5	369

Temperature		Pressure	
(°C)	(°F)	(Bar-abs)	(psig)
-9.0	15.8	27.2	380
-8.0	17.6	28.0	392
-7.0	19.4	28.8	403
-6.0	21.2	29.6	415
-5.0	23.0	30.5	427
-4.0	24.8	31.3	439
-3.0	26.6	32.2	452
-2.0	28.4	33.0	464
-1.0	30.2	33.9	477
0.0	32.0	34.9	491
1.0	33.8	35.8	504
2.0	35.6	36.7	518
3.0	37.4	37.7	532
4.0	39.2	38.7	546
5.0	41.0	39.7	561
6.0	42.8	40.7	576
7.0	44.6	41.8	591
8.0	46.4	42.8	606
9.0	48.2	43.9	622
10.0	50.0	45.0	638
11.0	51.8	46.1	654
12.0	53.6	47.3	671
13.0	55.4	48.5	688
14.0	57.2	49.7	705
15.0	59.0	50.9	723
16.0	60.8	52.1	741
17.0	62.6	53.4	759
18.0	64.4	54.7	778
19.0	66.2	56.0	797
20.0	68.0	57.3	816
21.0	69.8	58.6	836
22.0	71.6	60.0	856
23.0	73.4	61.4	876
24.0	75.2	62.9	897
25.0	77.0	64.3	918
26.0	78.8	65.8	940
27.0	80.6	67.4	962
28.0	82.4	68.9	985
29.0	84.2	70.5	1008
30.0	86.0	72.1	1031
30.9	87.6	73.6	1053







- SCM reserves possibility to modify or to change at present, without prevent notice.
- Documentation produced by SCM, is intended as guide for installation.
- The installer is responsible for verify, certifications, design, installation unit and all present systems.
- SCM Frigo is not responsible for any malfunction in the system due by the unit and/or system design and/or installation problems.
- SCM Frigo will not be responsible for operation unit or any system present, if above specific are not respected.



[www.scmfrigo.com](http://www.scmfrigo.com)

